



Steps to install Yealink FW to Yealink tablet

Preconditions are that Yealink firmware is downloaded and to **know IP address** of the target Yealink device


1. From Internet browser go to <https://IP> (e.g. <https://192.168.15.122>)

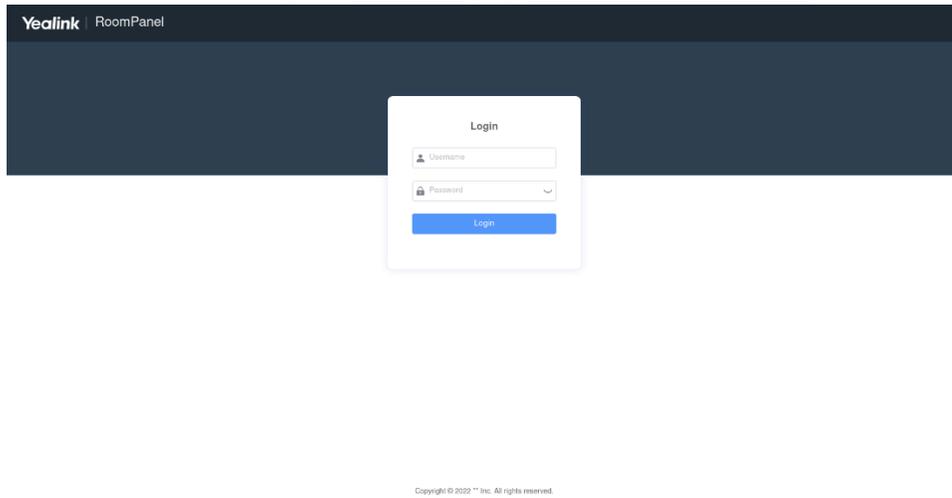


2. Login using this credentials:
username: **admin**
password: **0000**

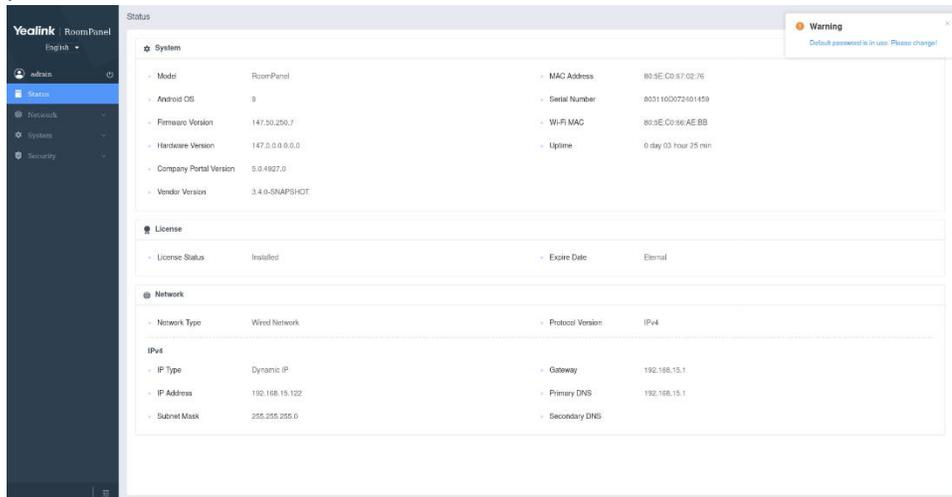


3. Choose **“System”** from left menu and then **“Update”**

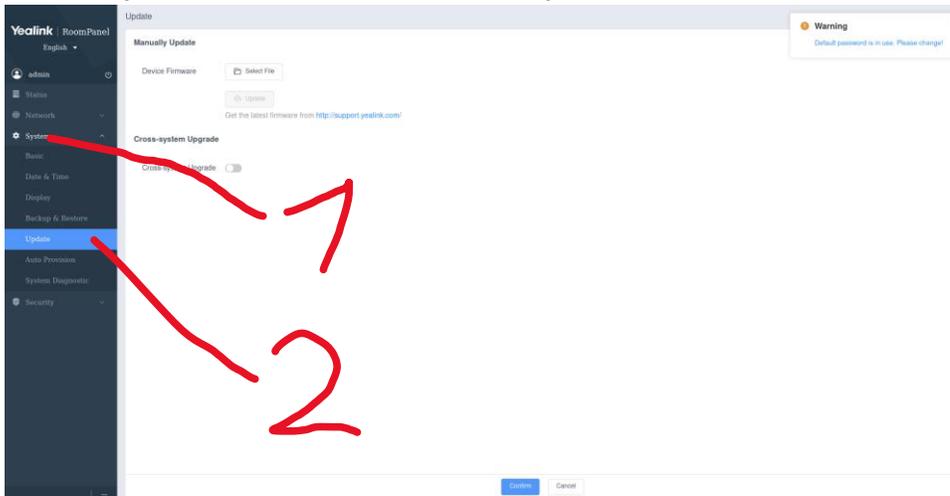


4. Select File Yealink firmware with **“.rom”** extension (e.g. RoomPanel-147.50.250.7.rom) and then run **“Update”**

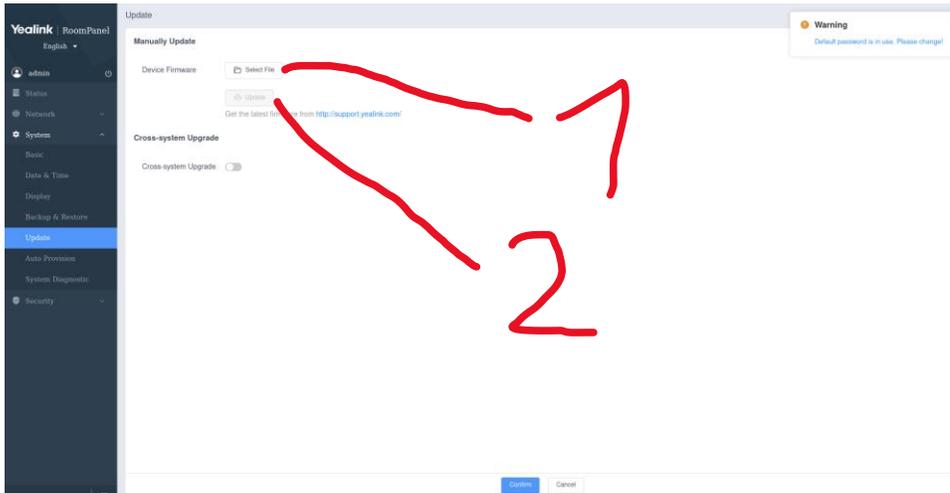

5. Confirm update

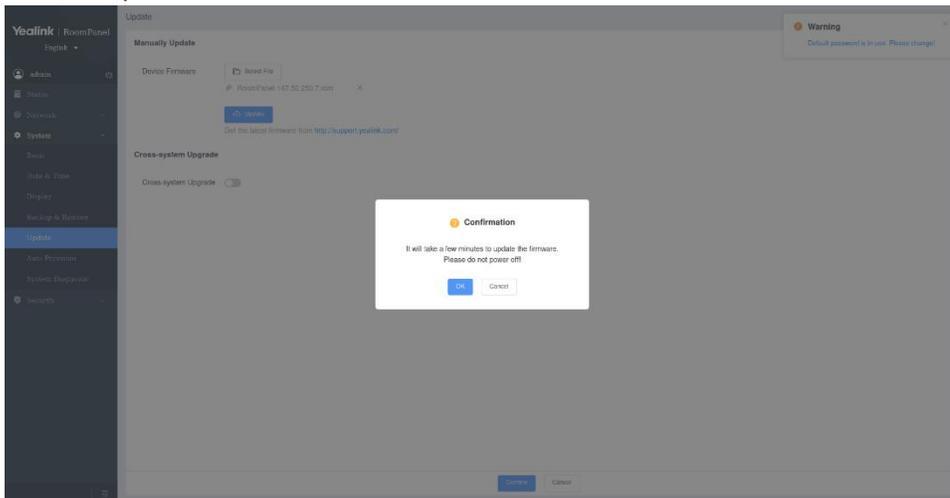

6. Updating

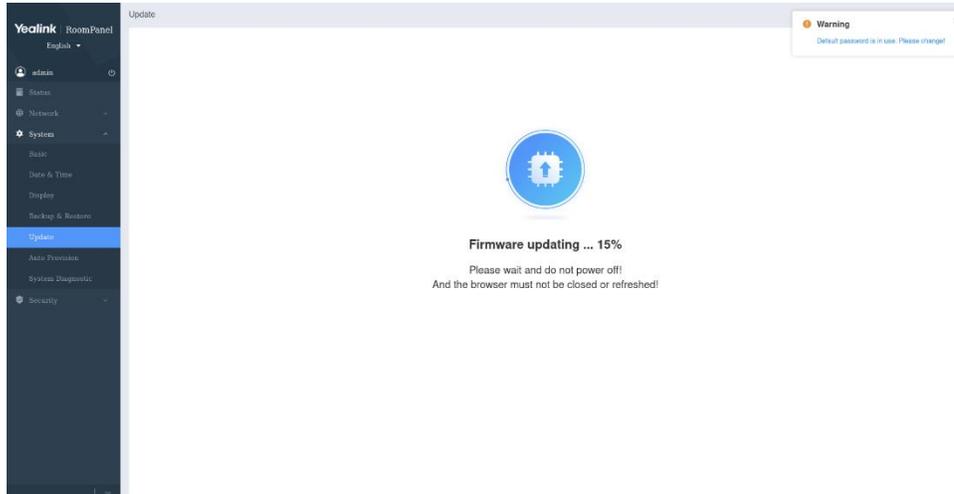

7. Updated version can be confirmed on "Status" menu

