

How to Set Up a Room Panel


This manual describes how to get your room panel properly installed and working.

Make sure



- Before a room panel can be installed you should make sure that there is PoE via the Ethernet cable.
- Network must also be up and running.

Instructions

1. Hold down the reset button for **six seconds** until the ASUS-logo appears.
2. Attach the Ethernet cable and place to mounted wall brackets.
3. Press your finger on the “human” icon to reach the admin interface. Password: 084091222.


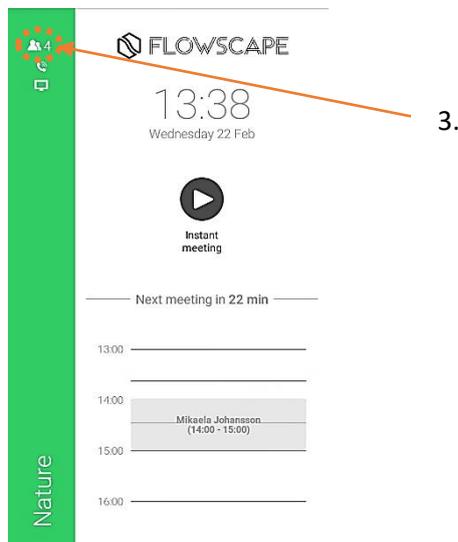


4. Setup USB (if popup box appears, accept and press setup USB again).
5. *Flowscape server:*
 - Fill in the server address and port -> Press Save and connect
 - Fill in the room id -> Press Verify room -> Press back

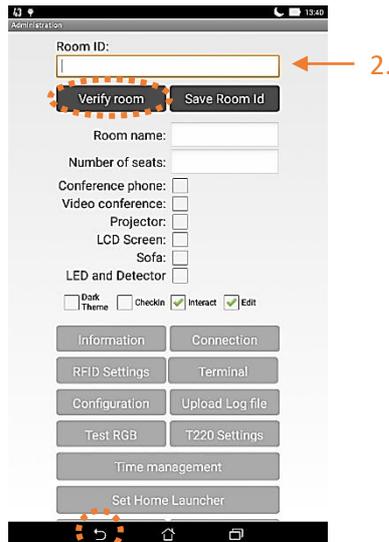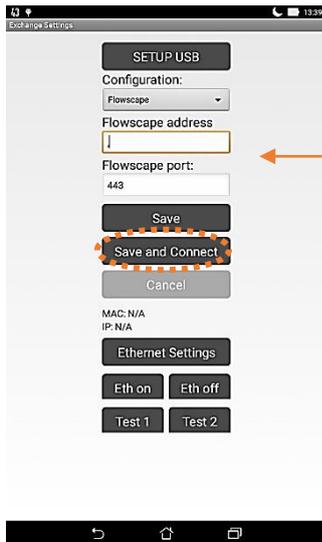

6. Exchange server:

- Fill in the exchange server information -> Press Save and connect
- Fill in the room email address -> Press Verify room
- Fill in room name and equipment manually -> Press back

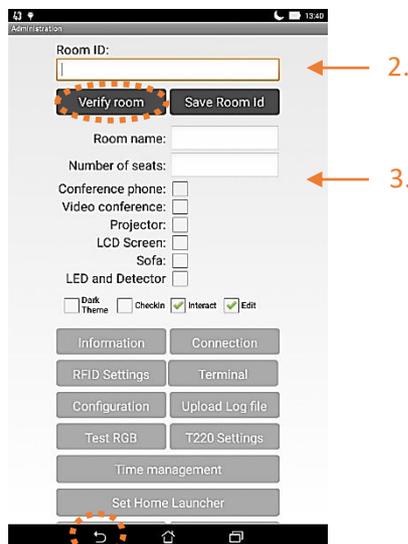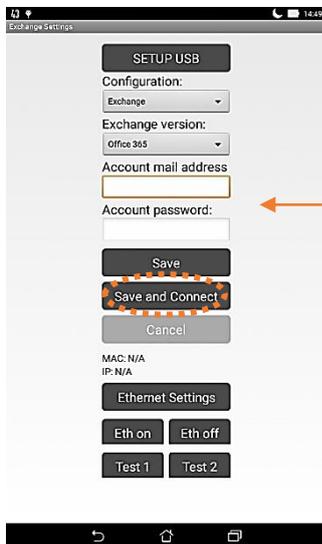

7. When the room panel has been connected to the server and the room id verified press back and wait 10 seconds until the room panel complete the synchronize.