
# Flowscape Roompanel T220 installation guide – installation on glass

### Parts included in package

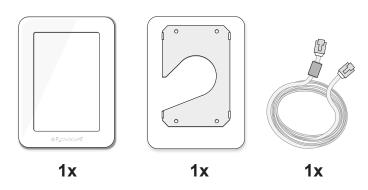


Flowscape Roompanel T220, mounting plate with adhesive back and Ultra Thin 1mm ethernet cable.

Clean the glass




Clean the glass from any dirt, dust or grease using isopropanol or ethanol, then leave to dry.

### 3 Suggested height

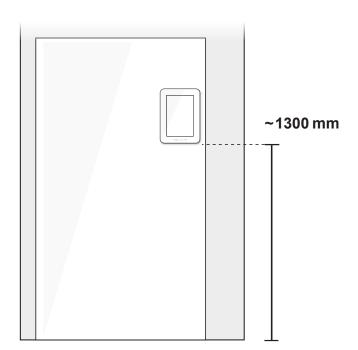


Preferably mount the roompanel close to the window edge to minimize visible cable routing. The cable can be routed in any direction.

#### Attach the mount plate to the glass

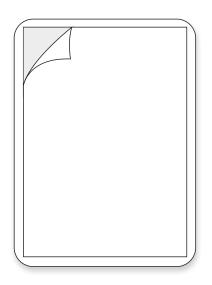


Peel off the protective film on the back and attach the mount plate to the glass.

# Flowscape Roompanel T220 installation guide – installation on glass

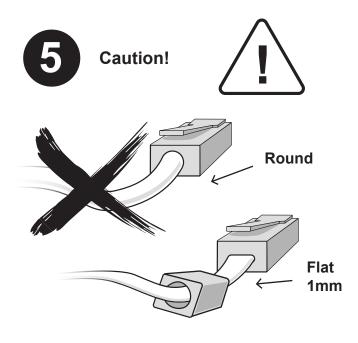


Always use the <u>included</u> ULTRA THIN 1MM Flat cable. Standard round ethernet cable will cause interference!



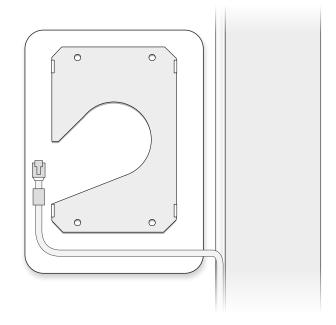

The ultra thin 1mm cable can be slided and hidden in between the plate and the roompanel.

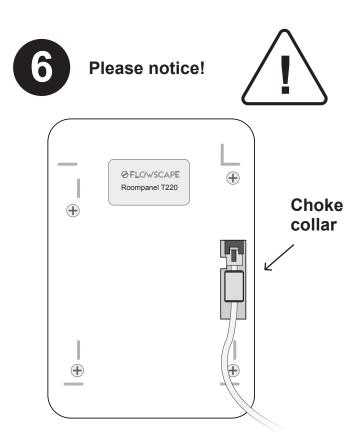

Slip the choke collar of the included cable into the cable pocket. (The choke is needed to eliminate electromagnetic interference)